


VOR/DME VCN	APP CRS	Rwy Idg	N/A
115.2	013°	TDZE	N/A
Chan 99		Apt Elev	150

VOR-B
PINE VALLEY (19N)

▼ Procedure NA at night. Visibility reduction by helicopters NA. Use Mount Holly altimeter setting, when not received, use Philadelphia Intl altimeter setting and increase MDA 20 feet. ▲ NA	MISSED APPROACH: Climbing right turn to 2100 direct VCN VOR/DME and hold.
---	--

MC GUIRE APP CON 126.475 363.8	UNICOM 123.0 (CTAF) 0
-----------------------------------	--------------------------

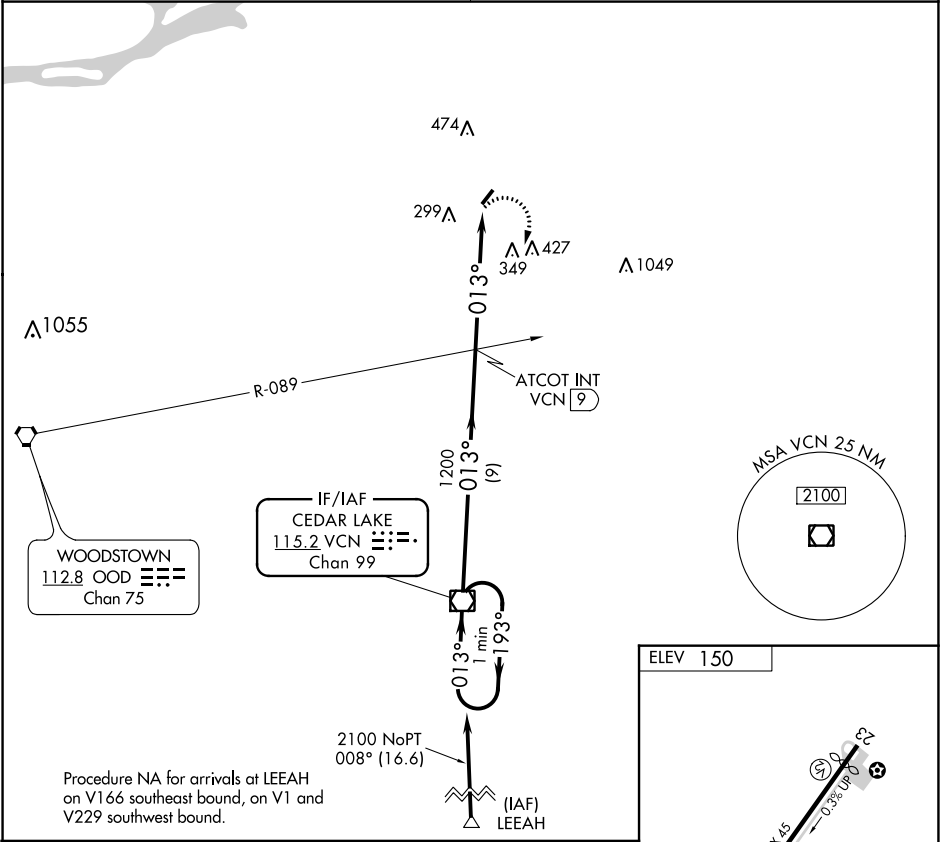

One Minute Holding Pattern		VCN VOR/DME		2100	VCN
				VCN 14.3	
2100 ← 193°		013° →		1200	VCN 14.3
9 NM		5.3 NM		VCN 14.3	
CATEGORY	A	B	C	D	FAF to MAP 5.3 NM
CIRCLING	900-1 750 (800-1)	NA			Knots 60 90 120 150 180
					Min:Sec 5:18 3:32 2:39 2:07 1:46