



LOC I-CEW	APP CRS	Rwy Idg	8006
111.9	175°	TDZE	213
		Apt Elev	214

ILS or LOC RWY 17

BOB SIKES(CEW)

ADF required.	MISSED APPROACH: Climb to 1000 then climbing right turn to 2000 direct KOBRA LOM and hold.
NA Circling NA for Cat D West of Rwy 17-35. Autopilot coupled approach NA. When local altimeter setting not received, use Eglin AFB altimeter setting and increase S-ILS 17 DA to 472 and all MDA 60 feet, increase S-LOC 17 Cat C/D and Circling Cat D visibility ¼ SM.	

ASOS	EGLIN APP CON	UNICOM
119.275	124.05 284.65	122.95 (CTAF) 0

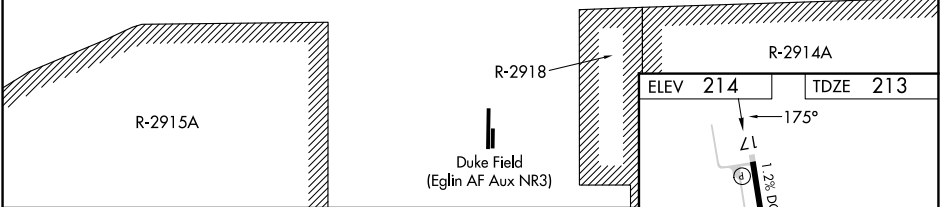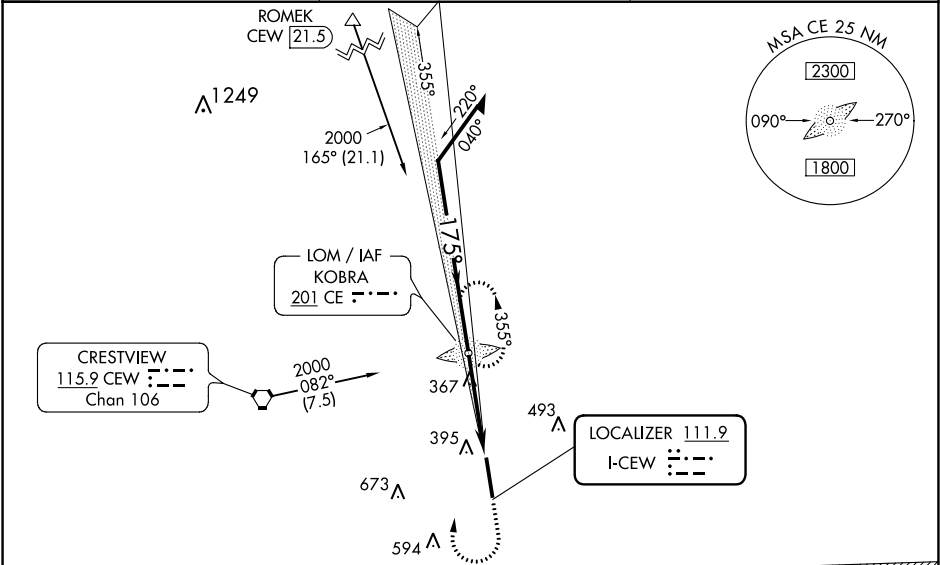

Remain within 10 NM		CE LOM	1000	2000	CE
355°		1498	↑	↷	↻
2000		1600	3.8 NM		
GS 3.00° TCH 50					
CATEGORY	A	B	C	D	
S-ILS 17		413-¾	200 (200-¾)		
S-LOC 17	620-1	407 (500-1)	620-1⅛	407 (500-1⅛)	
CIRCLING	700-1	486 (500-1)	820-1¾ 606 (700-1¾)	840-2 626 (700-2)	
HIRL Rwy 17-35 0					
FAF to MAP 3.8 NM					
Knots					60 90 120 150 180
Min:Sec					3:48 2:32 1:54 1:31 1:16