


LOC/DME I-CXO	APP CRS	Rwy Idg	7501
108.7	140°	TDZE	236
Chan 24		Apt Elev	245

ILS or LOC RWY 14
CONROE/NORTH HOUSTON RGNL (CXO)

ADF required.			MALSR 	MISSED APPROACH: Climb to 1000 then climbing left turn to 2100 direct ALIBI LOM/I-CXO 6.4 DME and hold.		
T A NA						
ATIS 118.325	HOUSTON APP CON 119.7 281.4	CONROE TOWER ★ 124.125 (CTAF) 0	GND CON 120.45	CLNC DEL 120.45	CLNC DEL 119.55 (When twr closed)	

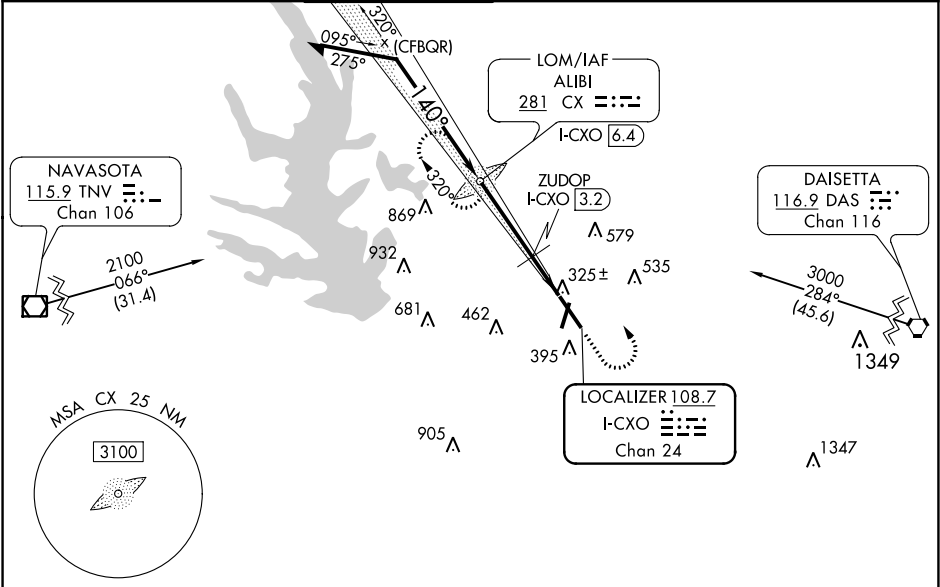

Remain within 10 NM		ALIBI CX LOM I-CXO 6.4		1000 2100 CX	
2100 140° 320°		1915		ZUDOP I-CXO 3.2 I-CXO 1.4	
GS 3.00° TCH 47		*840		*LOC only.	
3.3 NM 1.8 NM					
CATEGORY	A	B	C	D	
S-ILS 14	436-1/2		200 (200-1/2)		
S-LOC 14	840-1/2	604 (600-1/2)	840-1 3/8	604 (600-1 3/8)	
CIRCLING	840-1	595 (600-1)	880-1 3/4 635 (700-1 3/4)	960-2 1/4 715 (800-2 1/4)	
ZUDOP FIX MINIMUMS					
S-LOC 14	640-1/2	404 (400-1/2)	640-3/4	404 (400-3/4)	
CIRCLING	700-1	455 (500-1)	880-1 3/4 635 (700-1 3/4)	960-2 1/4 715 (800-2 1/4)	
REIL Rwy 32 1 MRL Rwy 1-19 HIRL Rwy 14-32 1					
FAF to MAP 5.1 NM					
Knots		60	90	120	150 180
Min:Sec		5:06	3:24	2:33	2:02 1:42