


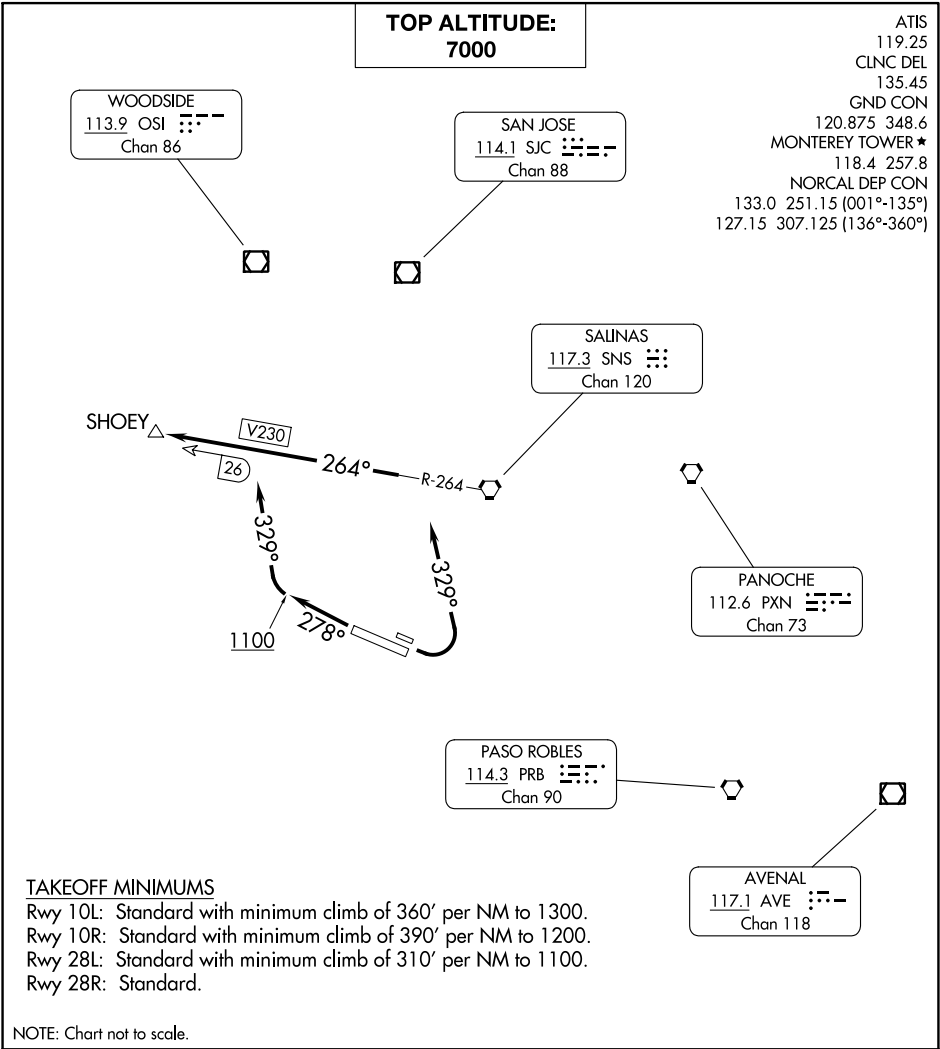


DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 10L/R: Climbing left turn heading 329°. Thence. . .

TAKEOFF RUNWAYS 28L/R: Climb heading 278° until leaving 1100 or as directed by Monterey Tower. Then climbing right turn heading 329°. Thence. . .

. . . intercept SNS R-264 westbound to SHOHEY intersection. Maintain 7000 or assigned altitude. Expect clearance to filed altitude five minutes after departure.

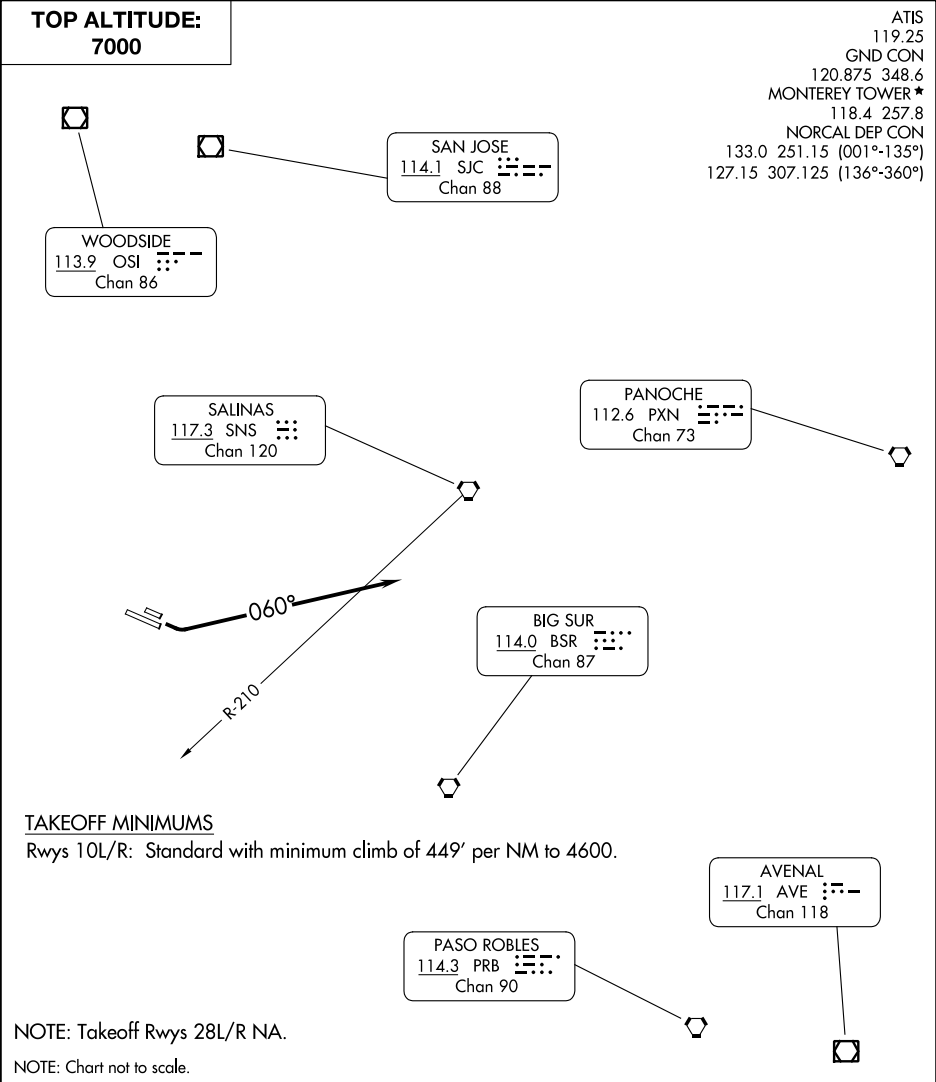

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 10L/R: Climbing left turn heading 060°. Expect vectors to filed route after passing SNS R-210. Maintain 7000 or assigned altitude. Expect clearance to filed altitude five minutes after departure.

LOST COMMUNICATIONS: If no transmissions are received within one minute after departure, climb direct SNS VORTAC, then via assigned fix/route. Maintain 7000.