

APP CRS
004°

Rwy Idg
3244

TDZE
125

Apt Elev
125

RNAV (GPS) RWY 36

WATTS-WOODLAND (O41)

▼


NA

DME/DME RNP- 0.3 NA.
Procedure NA at night.
Use Sacramento Intl altimeter setting; when not received,
use Sacramento Exec altimeter setting and increase all
MDA 20 feet.

MISSED APPROACH: Climbing left turn to 3000 direct CEVIT and hold.

TRAVIS APP CON
126.6 281.45

UNICOM
122.8 (CTAF) 0

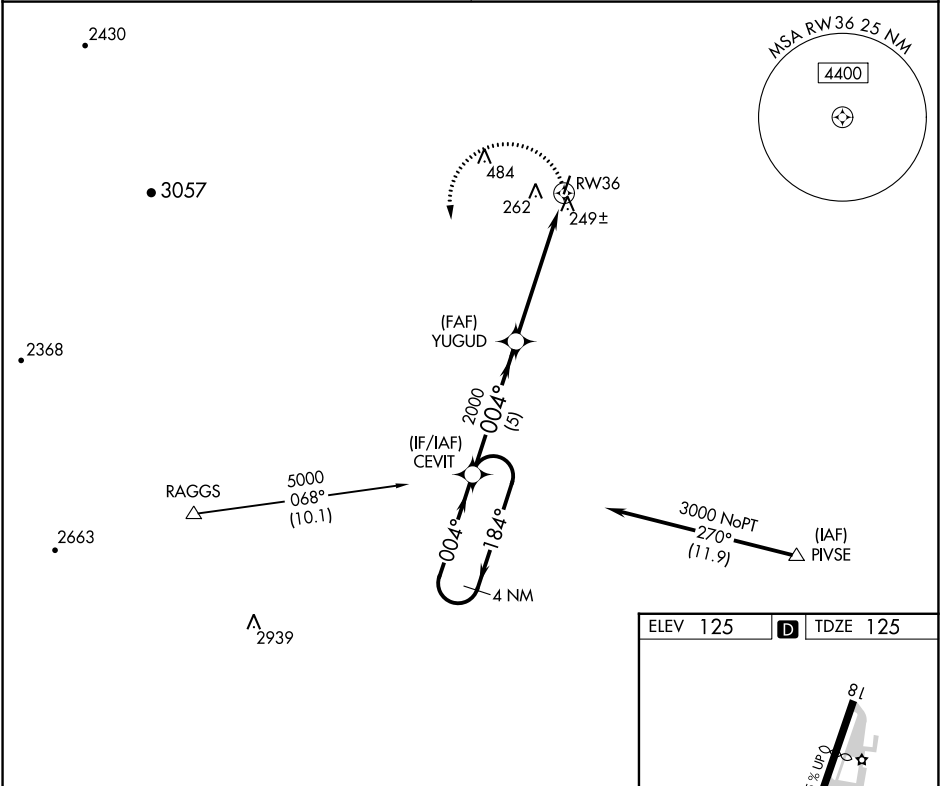

4 NM Holding Pattern

CEVIT

3000

184°

004°

YUGUD

2000

3.05°

TCH 40

RW36

5 NM

5.7 NM

ELEV 125

TDZE 125

3000

CEVIT

36

004° to RW36

MIRL Rwy 18-36 0

CATEGORY	A	B	C	D
RNAV MDA	560-1	435 (500-1)	NA	NA
CIRCLING	620-1	495 (500-1)	NA	NA