


APP CRS	Rwy Idg	4000
163°	TDZE	746
	Apt Elev	746

RNAV (GPS) RWY 16

SHERMAN MUNI (SWI)

RNP APCH	Use Sherman/Denison altimeter setting, if not received use Dallas Love Fld altimeter setting and increase all MDA 140 feet and increase LNAV visibility Cat B ¼ SM, Cat C ½ SM, and increase Circling visibility Cats A/B ¼ SM, Cat C ½ SM. Procedure NA at night. Rwy 16 helicopter visibility reduction below 1 SM NA.	MISSED APPROACH: Climbing left turn to 3000 direct URH DME and hold.
----------	---	---

FORT WORTH CENTER 124.75 323.0	UNICOM 122.8 (CTAF) 0
-----------------------------------	--------------------------

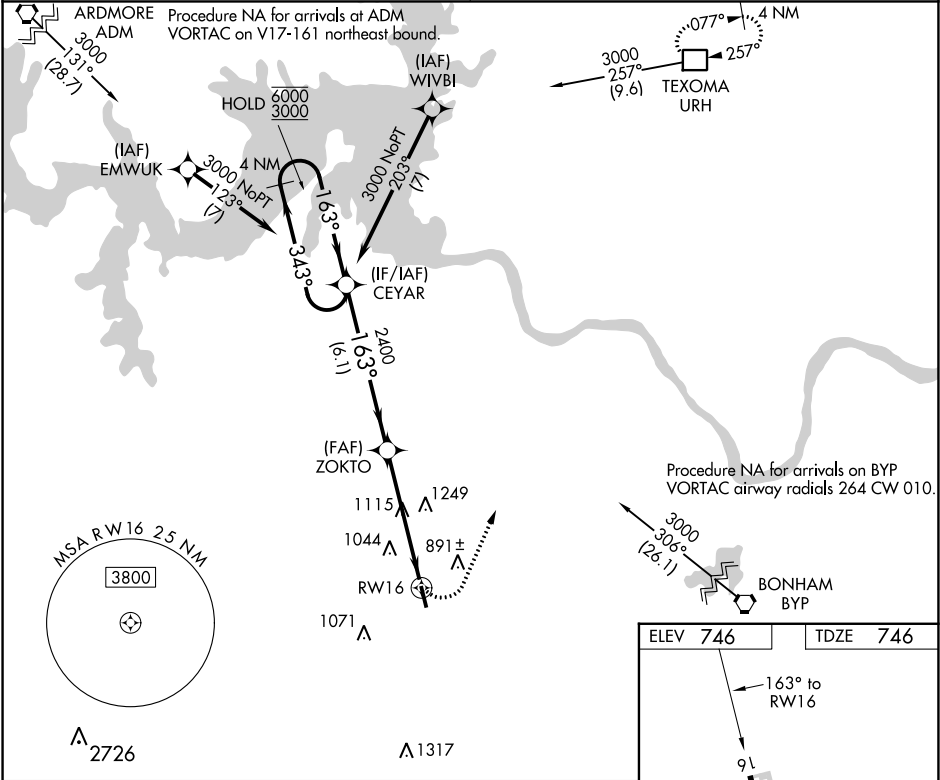

4 NM Holding Pattern					CEYAR		ZOKTO		RW16	
6000 3000					← 343° 163° →		163°		3.00° TCH 45	
					2400		6.1 NM		5.1 NM	
CATEGORY	A		B		C		D			
LNAV MDA	1440-1		694 (700-1)		1440-2		694 (700-2)		NA	
CIRCLING	1440-1		694 (700-1)		1620-2½		874 (900-2½)		NA	

