

MIAMI NINE DEPARTURE
(MIA9.MIA) 19MAY22

MIAMI NINE DEPARTURE
(MIA9.MIA) 23110


AI-256 (FAA)

MIAMI-OPA LOCKA EXEC (OPT)
MIAMI, FLORIDA

RADAR and DME required.

**TOP ALTITUDE:
ASSIGNED BY ATC**

ATIS 125.9
CLNC DEL 119.2
GND CON 120.025
OPA LOCKA TOWER* 134.675 (CTAF)
MIAMI DEP CON 119.45 290.325
(ALTNN, BEECH, BNGOS, DORRL, FLMGO, FOLZZ, HURCN, ZFP) 125.5 354.1
(GWAVA, KETLL, MAYNR)

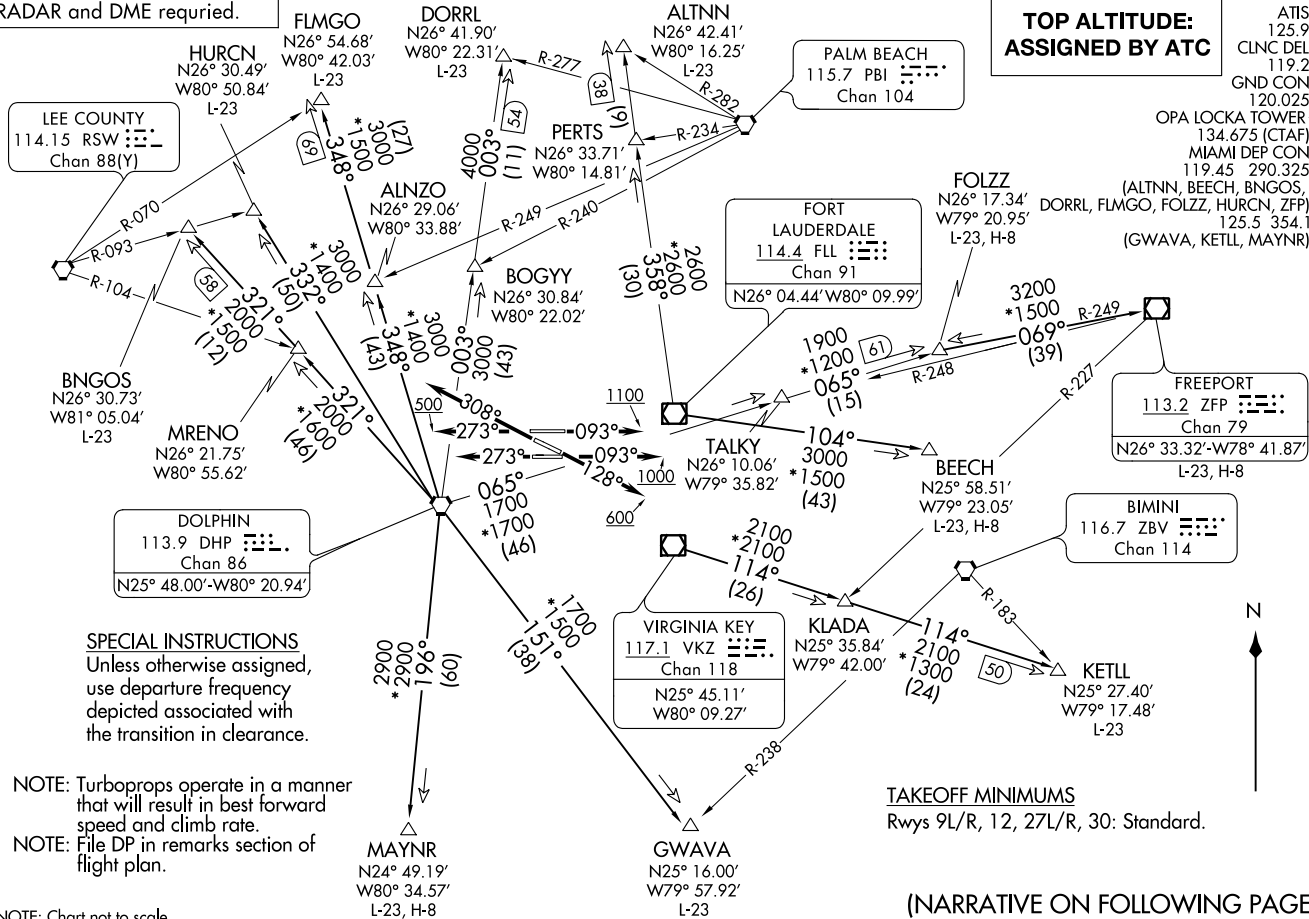

NOTE: Chart not to scale.



DEPARTURE ROUTE DESCRIPTION

- TAKEOFF RUNWAY 9L:

Climb on heading 093° to 1100 before turning north, thence...
- TAKEOFF RUNWAY 9R:

Climb on heading 093° to 1000 before turning north, thence...
- TAKEOFF RUNWAY 12:

Climb on heading 128° to 600 before turning north, thence...
- TAKEOFF RUNWAY 27L:

Climb on heading 273° thence...
- TAKEOFF RUNWAY 27R:

Climb on heading 273° to 500 before turning north, thence...
- TAKEOFF RUNWAY 30:

Climb on heading 308° thence...

... maintain 2000 or assigned higher altitude for RADAR vectors to appropriate transition.
Expect further clearance to filed altitude ten (10) minutes after departure.

- ALTNN TRANSITION (MIA9.ALTNN):

From over FLL VOR/DME on FLL R-358 to ALTNN.
- BEECH TRANSITION (MIA9.BEECH):

From over FLL VOR/DME on FLL R-104 to BEECH.
- BNGOS TRANSITION (MIA9.BNGOS):

From over DHP VORTAC on DHP R-321 to BNGOS.
- DORRL TRANSITION (MIA9.DORRL):

From over DHP VORTAC on DHP R-003 to DORRL.
- FLMGO TRANSITION (MIA9.FLMGO):

From over DHP VORTAC on DHP R-348 to FLMGO.
- FOLZZ TRANSITION (MIA9.FOLZZ):

From over DHP VORTAC on DHP R-065 to FOLZZ.
- FREEPORT TRANSITION (MIA9.ZFP):

From over DHP VORTAC on DHP R-065 to FOLZZ then on ZFP R-249 to ZFP VOR/DME.
- GWAVA TRANSITION (MIA9.GWAVA):

From over DHP VORTAC on DHP R-151 to GWAVA.
- HURCN TRANSITION (MIA9.HURCN):

From over DHP VORTAC on DHP R-332 to HURCN.
- KETLL TRANSITION (MIA9.KETLL):

From over VKZ VOR/DME on VKZ R-114 to KETLL.
- MAYNR TRANSITION (MIA9.MAYNR):

From over DHP VORTAC on DHP R-196 to MAYNR.